


## **INSTRUCTIONS FOR RKPRODUCTS CLOSING WHEEL KIT FOR WHITE 8000 PLANTERS**

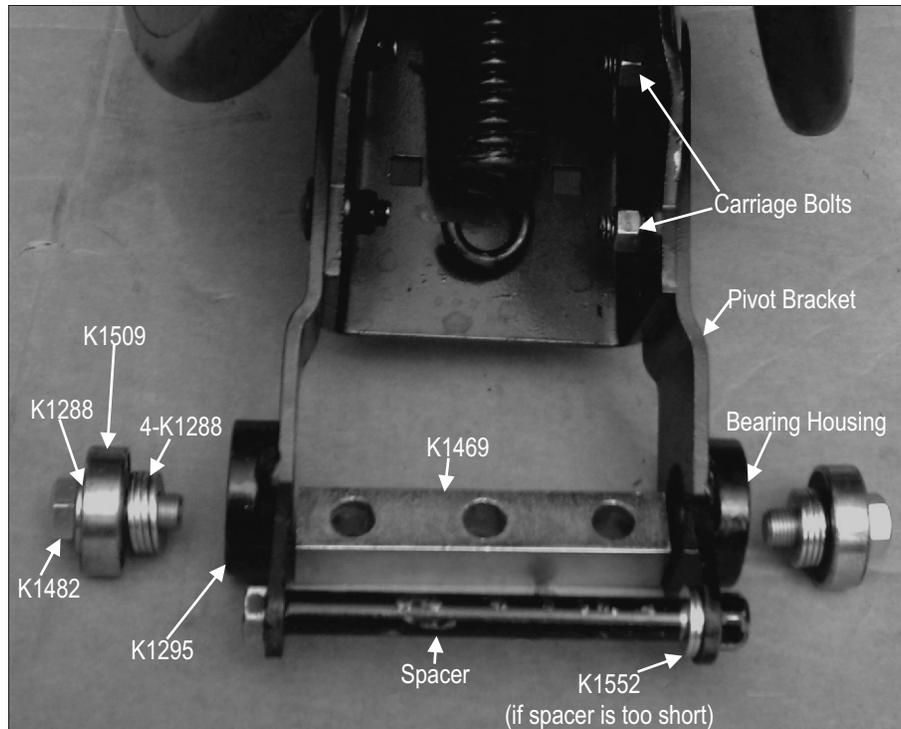

1. Position bearing housings concentric with original holes. Clamp housings to pivot brackets and weld with a 1" weld top and bottom.
2. Paint the bearing housings and welds to protect from corrosion. Be careful not to allow sags and runs inside of the housings. Allow the paint to dry.
3. Reassemble frame on to planter. It may be necessary to loosen two carriage bolts to assemble other parts.
4. K1552 washer may not be needed if spacer is long enough.